

# OWNER'S MANUAL




CAPE  
DORY  
YACHTS







INCORPORATED

*COVE STRIPE REPLACEMENT*

Bow

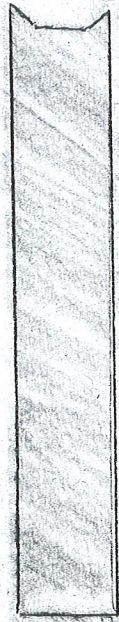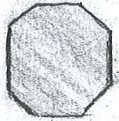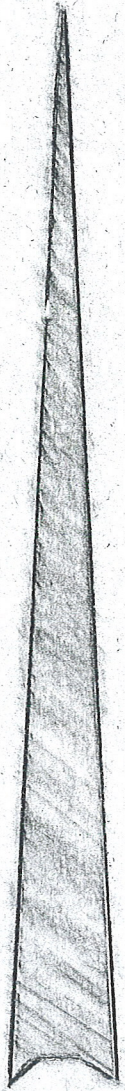

STEEL

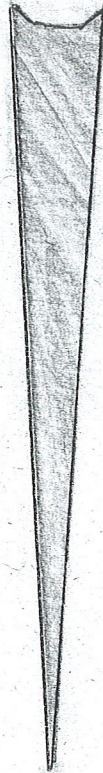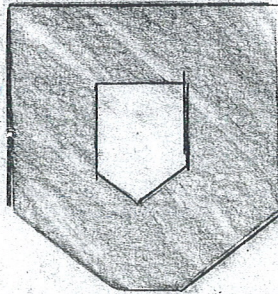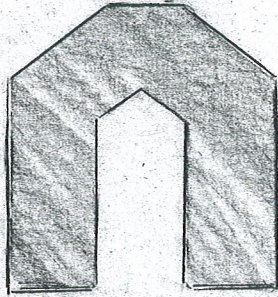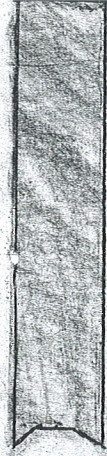



COVE STRIPE KIT INSTRUCTIONS

25D

Cut a template out of  $\frac{1}{4}$ " plywood (Fig. A). Please see the chart below to determine dimension A. Place the 3" legs of the template against the underside of the rubrail. With a pencil in the drill hole, slide the template along the rail. Position the top edge of the tape along the pencil line.

Place the sharply pointed decal at the forward end of the tape and the 'CD' logo decal at the aft end of the tape. (The forward end of the 'C' will have to be cut out before it is applied (Fig. B). See the enclosed profile drawing for the exact locations of the forward and aft ends of the complete stripe.

BOAT

DIMENSION A

Typhoon	2 $\frac{1}{2}$ "
CD-22/25D/27	3"
CD-28/30/31/33	3 $\frac{1}{2}$ "
CD-36	4"

Figure A. Template



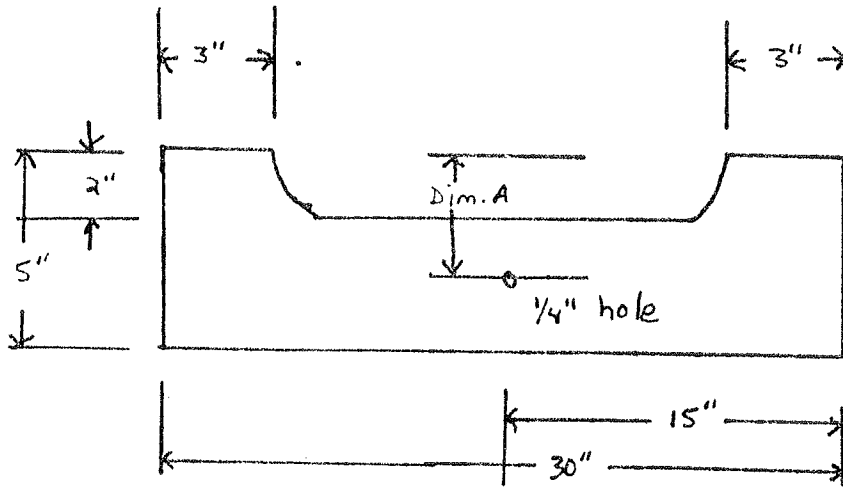


Figure B. 'CD' Logo

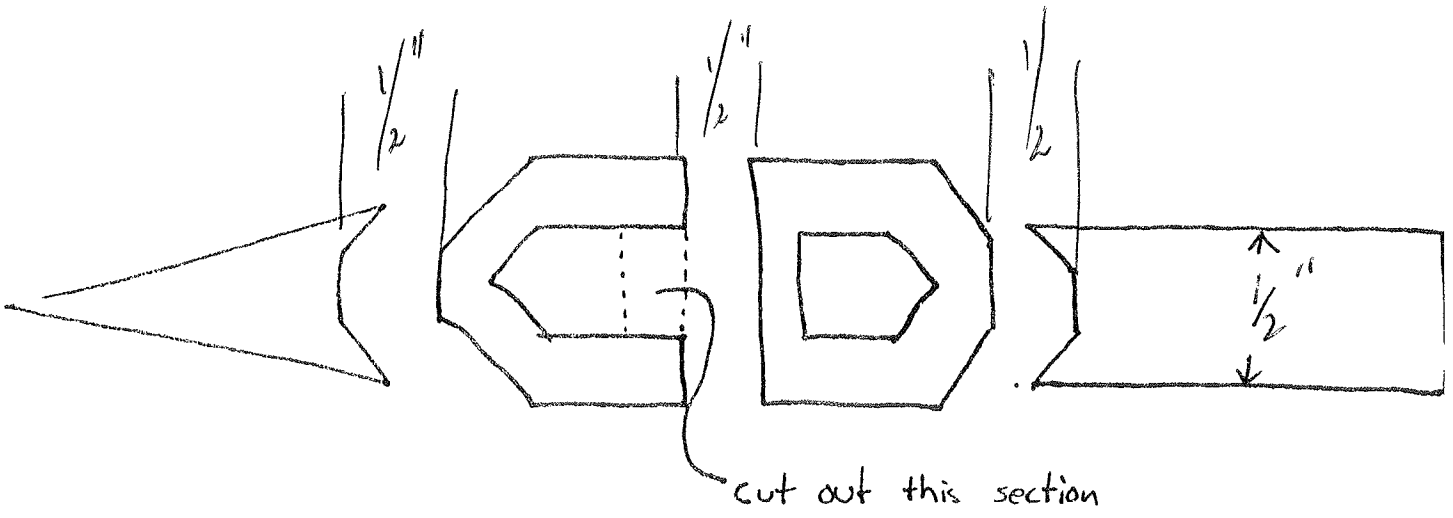

REFER TO ACTUAL TEMPLATE

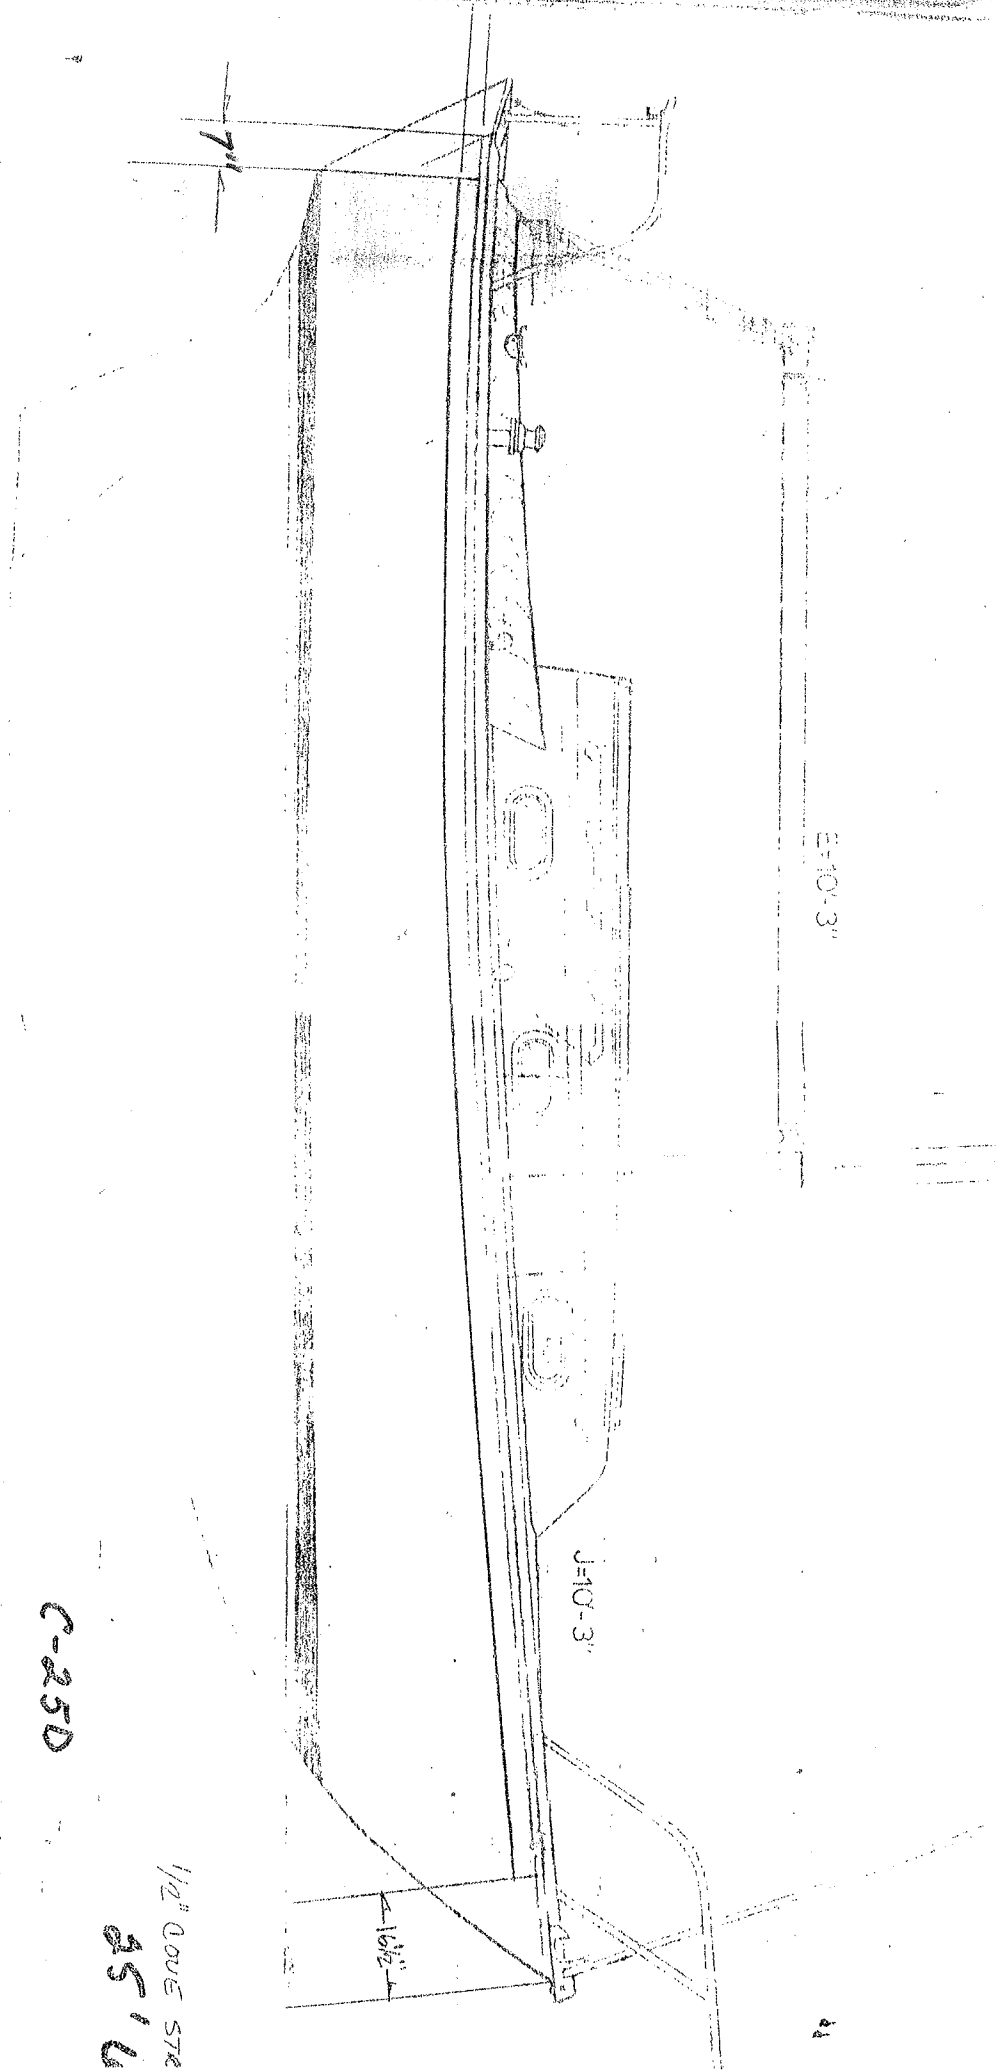

C-25D

1/2" COVER STE  
AS'U